



Crested Gecko Starter Kit Set Up Guide

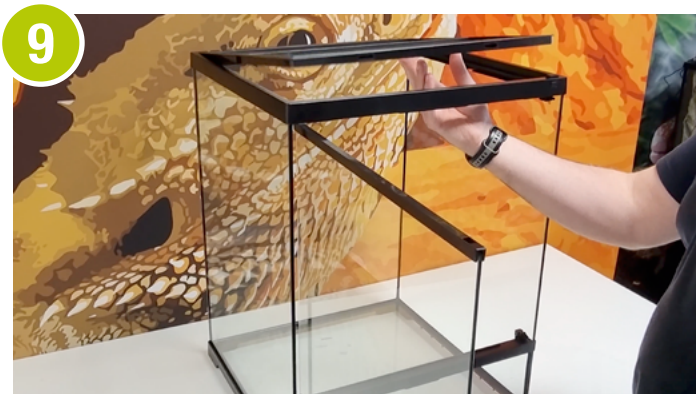

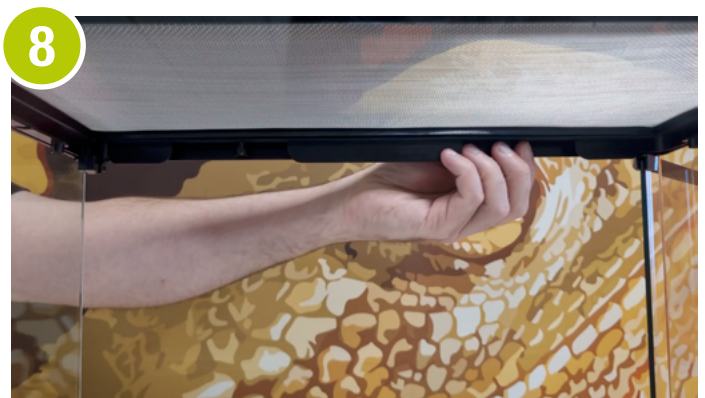


Now it's time to place the hide and the bowl



Now for the lighting, let's turn the terrarium around



Replace the lid, and position the light dome as shown

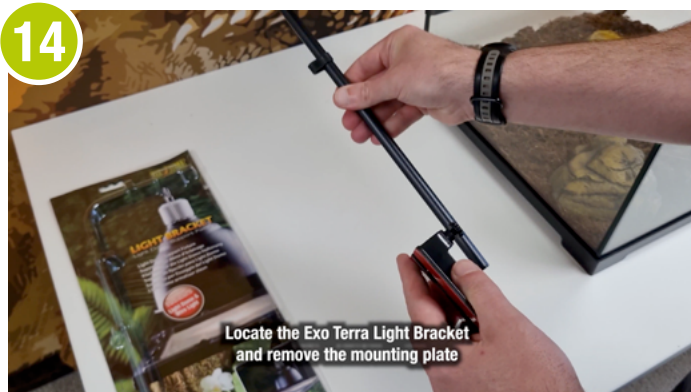


Locate the Exo Terra Light Bracket and remove the mounting plate



Line up the mounting bracket with the light dome



Remove the adhesive backing and attach to the glass

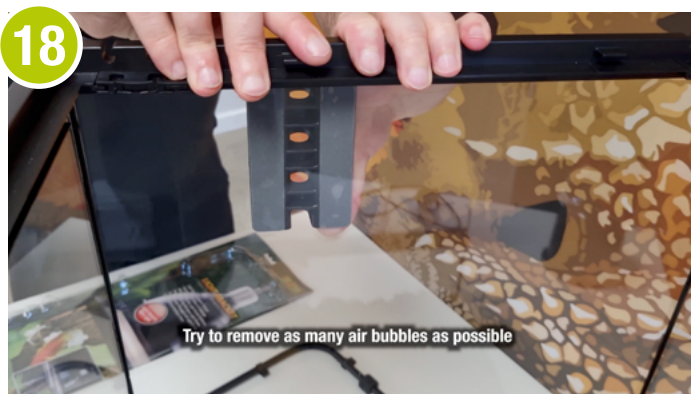

Try to remove as many air bubbles as possible



Now we'll install the Thermostat and Thermometers. Remove the dome light and lid from the terrarium



Feed the probe wire of the thermostat through the opening at the back of the terrarium

21



22



Now we'll install the Combometer

23



The probe should be half way down the terrarium

24



Replace the terrarium lid

25




Install the light bracket arm into the mounting

26



Screw the Basking Bulb into the light dome

27

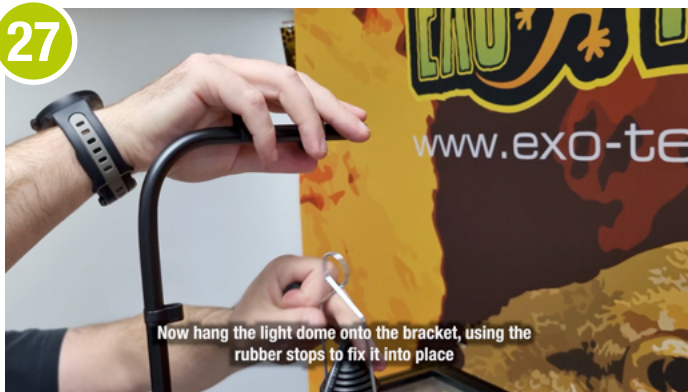

Now hang the light dome onto the bracket, using the rubber stops to fix it into place

28



29



Push the wire into the retaining clips on the arm.

30



Adjust the height of the light dome

31



Make sure there is a gap between the dome and mesh and away from the plastic lid frame

32



Now plug the Light Dome into the Thermostat Socket

33



Make sure the Thermostat is in dimming mode, then set to 22 C by turning the recessed dial.

34



Peel the adhesive backing and mount the combometer

35



36



You can add the optional printed background included with the Exo Terra Pro Terrarium if desired.

37



Next we'll mount the T5 UVB. Start by installing the light tube

38



Connect the power lead

39



Now we can plug in and power on all the lights.

40



You can add additional decor and plants to dress up the terrarium as desired (available separately)