

Leopard Gecko Vivarium Starter Kit Set Up Guide

1



Remove the items from Starter Kit box.

2



For this set up we're using the Vivexotic Reptihome Medium Vivarium

3



Start by taking the top panel off the Viv and lay it on flat surface

4



Place the the Heat Guard Fixture and T5 Mounting brackets as desired and mark drill hole locations

5




We can now drill the pilot holes

6



We can now drill the pilot holes

7

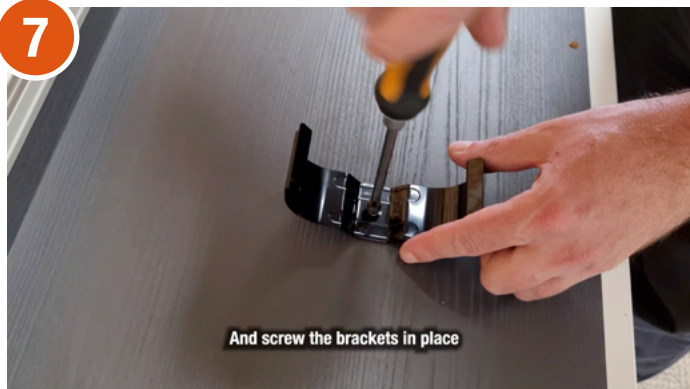


And screw the brackets in place

8



Now we can mount the Heat Guard

9

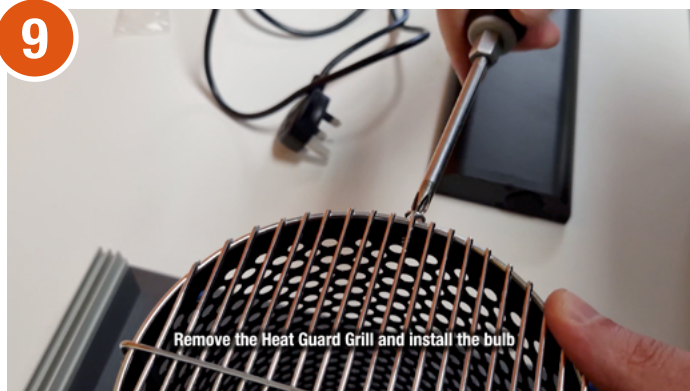

Remove the Heat Guard Grill and install the bulb

10





Replace the grill and secure



Now clip the T5 Fixture into the brackets



Install the T5 Tube into the fixture




Replace the vivarium top panel and secure with the 4 cams



Remove the upper Easy Vent and feed through the plug and cable



Now feed the T5 power cord into the vivarium

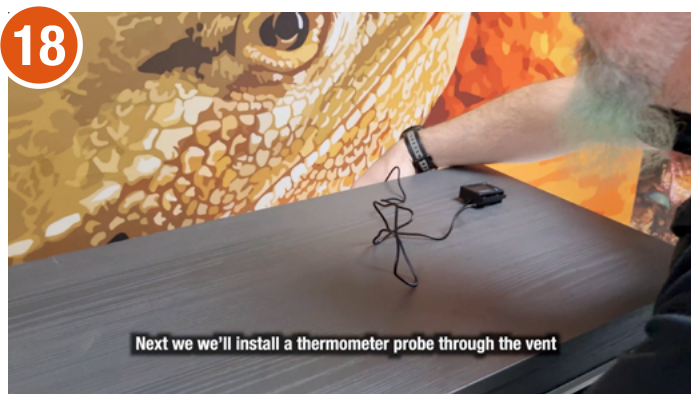


Next we we'll install a thermometer probe through the vent



Remove the tabs on the Easy Vent Cover



Replace feeding the cables through the channels

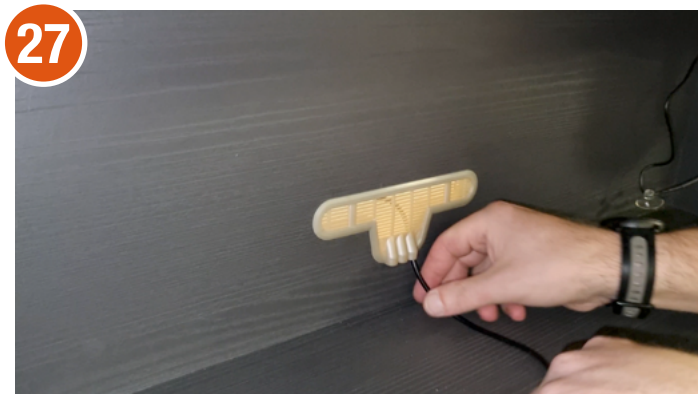

31



Plug the Thermostat and T5 Fixture into the power source

32



Now we'll add the substrate

33



And the hides

34



Position the thermometer probes inside the hides

35



Add the bowl

36



The Thermostat probe can be secured with a cable clip
(Available separately)

37



Now set the Thermostat to Dimming mode and the temperature to: 28 C

38




Use the sticky pads to attach the Thermometers as desired

39



Install the glass doors and the stopper.

40

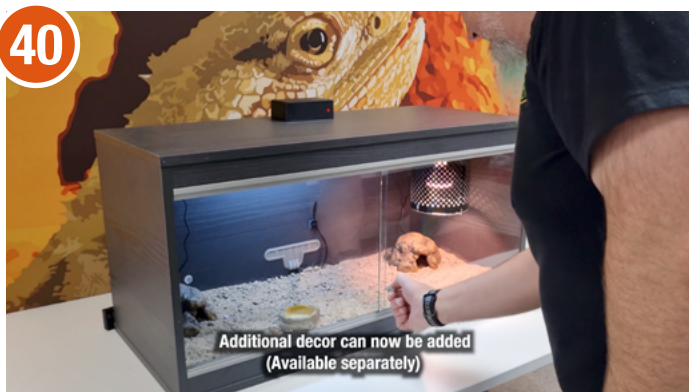

Additional decor can now be added
(Available separately)